

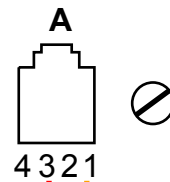


5090 Direct motor control wiring.

Use when Timer is not connected to give separate Open, Stop, Close functions.

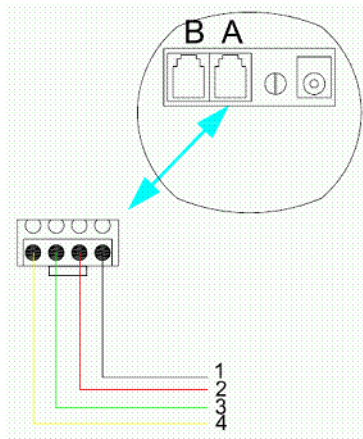

*Note that the 'Stop' button can be omitted because operating the 'open' switch once will stop the curtains when they are closing and vice versa.

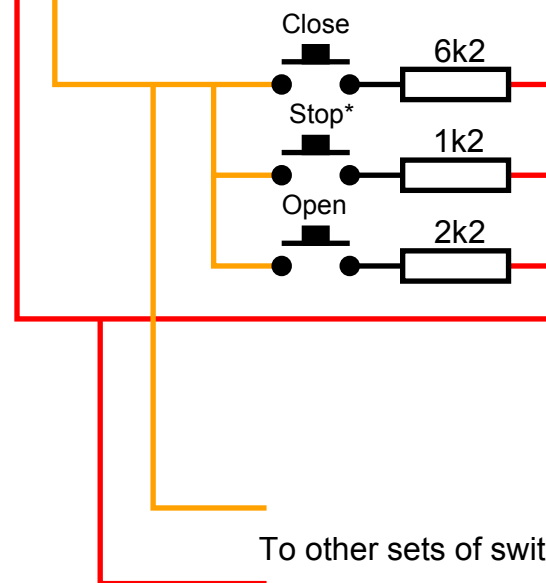

To other sets of switches and resistors

Several sets of buttons and resistors can be used, but if two buttons are pressed at the same time, incorrect operation might result.