

Series 20 limit setting using a SG11422 Setting Lead

Series 20 manual limit setting procedure

- 1) Plug lead into mains supply
- 2) Ensure lead is in 2 way operation mode
- 3) 2 way operation red LED is lit






Series 20 limit setting using a SG11422 Setting Lead

Series 20 manual limit setting procedure

1. Drive blind to approximately mid position – thereby determining the direction of movement of the blind on the switch (you must allow at least 30cm of movement to the nearest limit setting position).
2. Press the up and down buttons on the test lead (or handset) together, after approx. 5 sec. motor will respond with a short up and down movement.

⇒ **Limits are erased. Motor is now in limit setting mode**

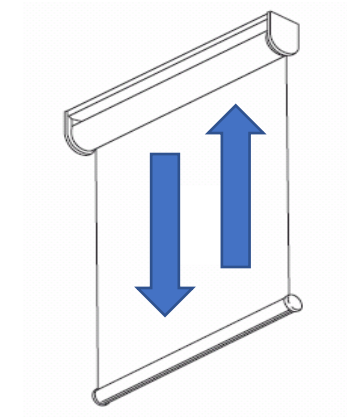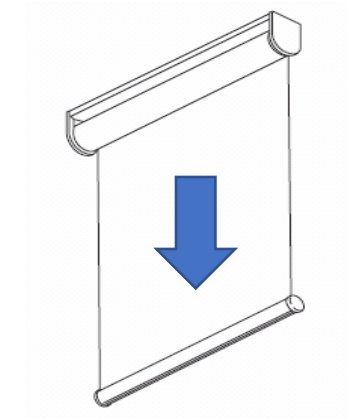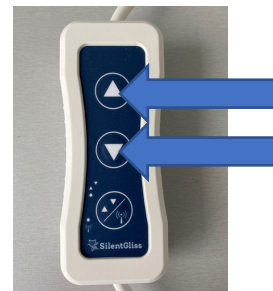

Series 20 limit setting using a SG11422 Setting Lead

Series 20 manual limit setting procedure




3. Hold the down button until motor 'jolts' and increases speed then continue pressing down button until blind is at required position.

(To get to an accurate limit position release the button and pulse in the same direction with the same button in small movements).

4. Press and hold the up button until motor stops automatically (approx 30 cm movement).

Release the up button

⇒ **Lower position is set**

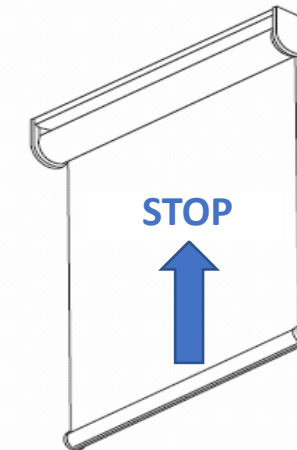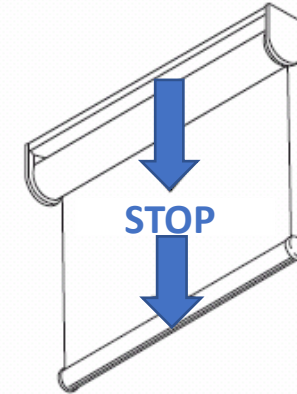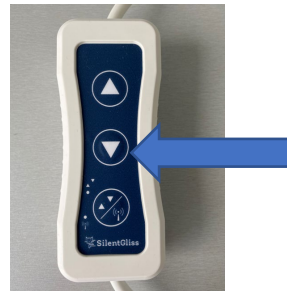

Series 20 limit setting using a SG11422 Setting Lead

Series 20 manual limit setting procedure

5. Hold the up button until motor 'jolts' and increases speed then continue pressing up button until blind is at required position.

(To get to an accurate limit position release the button and pulse in the same direction with the same button in small movements).

6. Press and hold the down button until motor stops automatically (approx 30 cm movement).

Release the down button.

⇒ **Both limits are set**

