



**SETTINGS FOR SWITCHES
1 & 2**

**MOTOR 2860 OR 5360
(MOTOR 2860 SHOWN)**

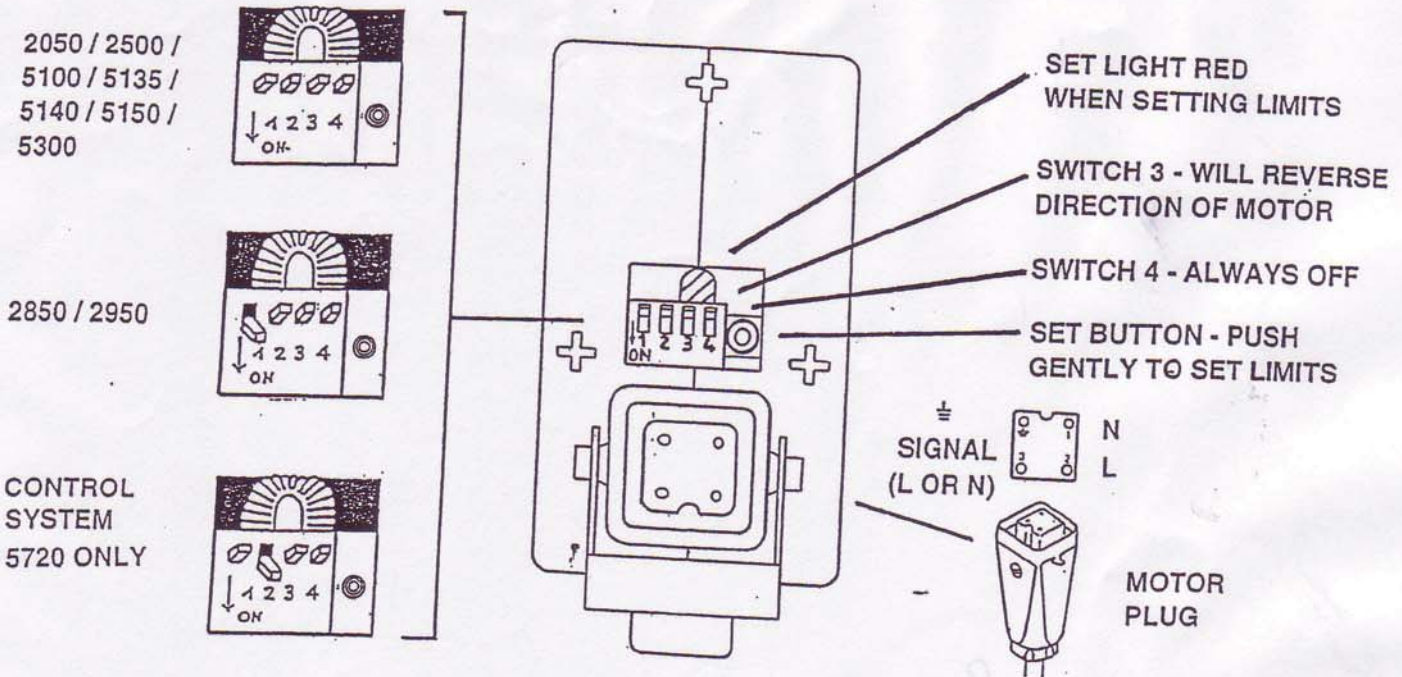

NOTES: RED SET LIGHT WILL GLOW WHILE LIMITS ARE BEING SET. BOTH OPEN AND CLOSE LIMITS MUST BE SET EACH TIME. WHEN SET LIGHT IS ON MOTOR WILL ONLY RUN WITH SWITCH DEPRESSED.

METHOD: GENTLY PUSH BLUE SET BUTTON. RED SET LIGHT WILL GLOW.

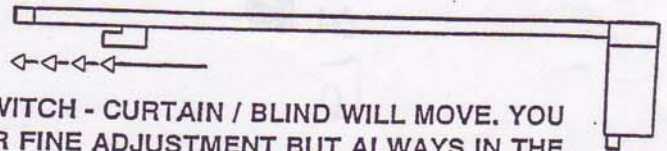

PRESS AND HOLD DOWN CLOSE OPERATING SWITCH - CURTAIN / BLIND WILL MOVE. YOU CAN RELEASE SWITCH AND PULSE SWITCH FOR FINE ADJUSTMENT BUT ALWAYS IN THE CLOSE DIRECTION. LEADING EDGE OF CURTAIN / BLIND MUST STOP JUST SHORT OF COLLISION WITH ENDPiece OR OTHER CURTAIN OR DAMAGE MAY OCCUR.



PRESS AND HOLD DOWN OPEN OPERATING SWITCH. CURTAIN / BLIND WILL OPEN. PULSE SWITCH AS NECESSARY FOR FINAL ADJUSTMENT BUT ALWAYS IN THE OPEN DIRECTION. STACK AREA MUST HAVE SLIGHT SLACK. MOTOR MUST NOT FINISH STRAINING AGAINST THE STACK.

PRESS CLOSE BUTTON AND COUNT TO 3 - LIGHT WILL GO OUT. MOTOR HAS REMEMBERED OPEN AND CLOSE LIMITS. IF LIGHT DOES NOT GO OUT LIMITS HAVE NOT SET. PRESS SET BUTTON AND REPEAT. IF YOU MISS SET EITHER OPEN OR CLOSE LIMIT PRESS BLUE SET BUTTON AGAIN AND RESET BOTH LIMIT POSITIONS.

**LIMIT SETTING INSTRUCTIONS
FOR MOTORS 2860 AND 5360**

MOTOR TYPES: A B C	
ISSUE 2	DRAWING No.
REVISION 0	E402