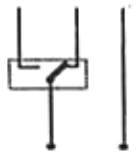
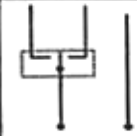


Programming | Endstop “non permanent power”

non permanent power	
Action/ Step	Reaction
Disconnect the motor from the power supply, latch the open or close button	
Press programming button 1, power up the Motor at the same time	LED lights on, motor vibrates, motor is ready for programming
Hold both buttons (1 and 2) at the same time for more than 6 sec.	LED twinkle 2x, motor vibrates after 3 and 6 sec.
Drive the curtain with button 1 to its first end position	Curtain is now at the first end position
Hold both buttons(1 and 2) at the same time for more than 3 sec.	LED twinkle 1x, motor vibrates, first end position is set
Drive the curtain with button 2 to its second end position	Curtain is now at the second end position
Hold both buttons(1 and 2) together more than 3 sec.	LED twinkle 1x, motor vibrates, second end position is set
Release the latched switch	 LED lights off after 3 min., system is ready to use