

Silent Gliss 5100



EN Operation instructions

Please select channel for multi-channel transmitter before operation 0.5s is needed for up/down converting, max single running time is 4 min.

1. Programming



Press the PROG hutton 1s



Red light flash slowly. please do the next step within 10s.



Press UP of transmitter



Blue light flash 3 times Programmed.

2. Changing direction

In the case of the motor goes in wrong direction



Press STOP on programmed transmitter and hold for 5s



Red light flash slowly, please do the next sten within 10s.



Release and press STOP again.



Blue light flash 3 times. Changed.

3. Mid-limit position setting Only one can be set

Mid-limit position set

Middle position operation

Middle position delete



Press UP + DOWN for 1s



Blue light flash 3 times. Set.



Press STOP and hold for 2s Move to mid-limit position.

Press UP + DOWN for 5s



Blue light flash 3 times. Deleted.

Supplied by



4. New transmitter adding



Press STOP on programmed transmitter and hold for 5s.



Red light flash slowly, please do the next step within 10s



Press UP of new transmitter.



Blue light flash 3 times.

5. Single code deleting



Press STOP on programmed transmitter and hold for 5s.



Red light flash slowly, please do the next step within 10s.



Press DOWN.



Blue light flash 3 times.

6. All code deleting

Journey will be deleted and the running direction will be the factory defaulted mode, keeping the touch function.

Method :



Press STOP on programmed transmitter and hold for 5s.



Red light flash slowly, please do the next step within 10s.



Press PROG button on back side and hold 7s.



Indicator die out. Deleted.



Press the PROG button on motor and hold for 3s.



Red light flash.



Press the PROG button again.



Blue light indicate 1s. Deleted.

Supplied by







www.silentgliss.com/worldwide